



## AUTOCAR ACX® ALWAYS UP® DISPLAY SOFTWARE UPDATE PROCEDURE

Release v1.1 June, 2019

For assistance or if you have any questions at all, get free help from an expert technician at Autocar Solutions.



Visit [www.AutocarTruck.com](http://www.AutocarTruck.com) and click the green diamond.

1. Download a new version of the Always Up Display software for your truck model from [www.autocartruck.com/software](http://www.autocartruck.com/software) and copy the .ipk and .gz files to a USB drive.

FIND TRUCKS AVAILABLE NOW BUY GEAR AND APPAREL CONTACT US NOW Search

Autocar Always Up

MY VOCATIONS TRUCKS AUTOCAR DIFFERENCE ABOUT US SERVICE LOCATIONS

ALWAYS UP DISPLAY SOFTWARE DOWNLOADS

DOWNLOAD INSTRUCTIONS

1. Download the Detailed Download Instructions, which includes step-by-step instructions and illustrations. The Update process should take about 5 minutes.
2. Download the appropriate software file for your truck from the selections below and copy the file to a USB drive.
3. From inside the truck cab, insert your USB drive in the truck's USB port. (See instructions for exact location.)
4. Press <Menu> on the display controller; then select <Settings>, then <Updates>, then <Check For App Updates>, then <Install Update>. The display will load the latest update from the USB drive you inserted.
5. Once you see the message "Update Complete, Cycle Key", turn the truck ignition key to the Off position and then back to Acc or Start. You're done!

If you have any questions at all, contact Autocar Solutions via the green diamond on [AutocarTruck.com](http://AutocarTruck.com) or click here:

AUTOCAR ACX AUTOCAR DC

DETAILED DOWNLOAD INSTRUCTIONS  
6/12/2019 9:22:23 AM

Release Notes:  
Includes step-by-step instructions and illustrations.

DETAILED DOWNLOAD INSTRUCTIONS DOWNLOAD

ACX DISPLAY SOFTWARE V2.1.1.1  
5/20/2019 4:30:43 PM


Release Notes:  
- Production release

ACX DISPLAY SOFTWARE V2.1.1.1 DOWNLOAD


2. Insert the USB drive into your truck's USB port found inside the driver's-side armrest.




3. With the truck parked and the engine off, turn the ignition key to IGN. This will start the Always Up Display (take care not to start the engine).
4. Once the display has initialized, press the <Menu> button on the display controller and then click <Settings> on the display by pressing the main controller knob.

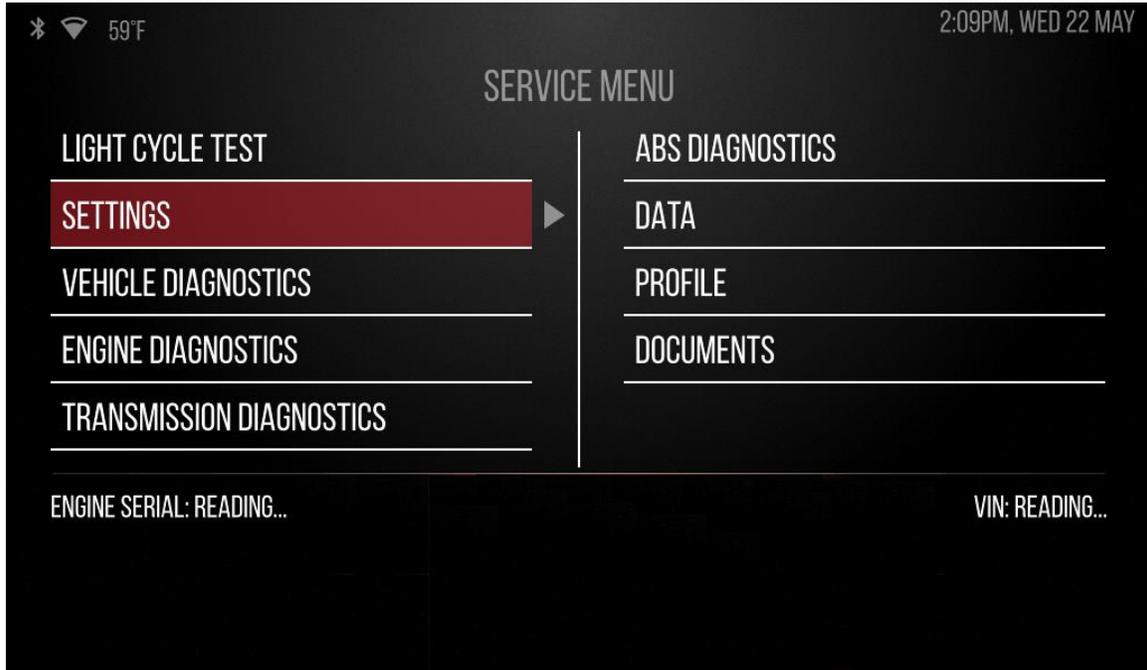


5. In the Settings menu, click <Updates>.

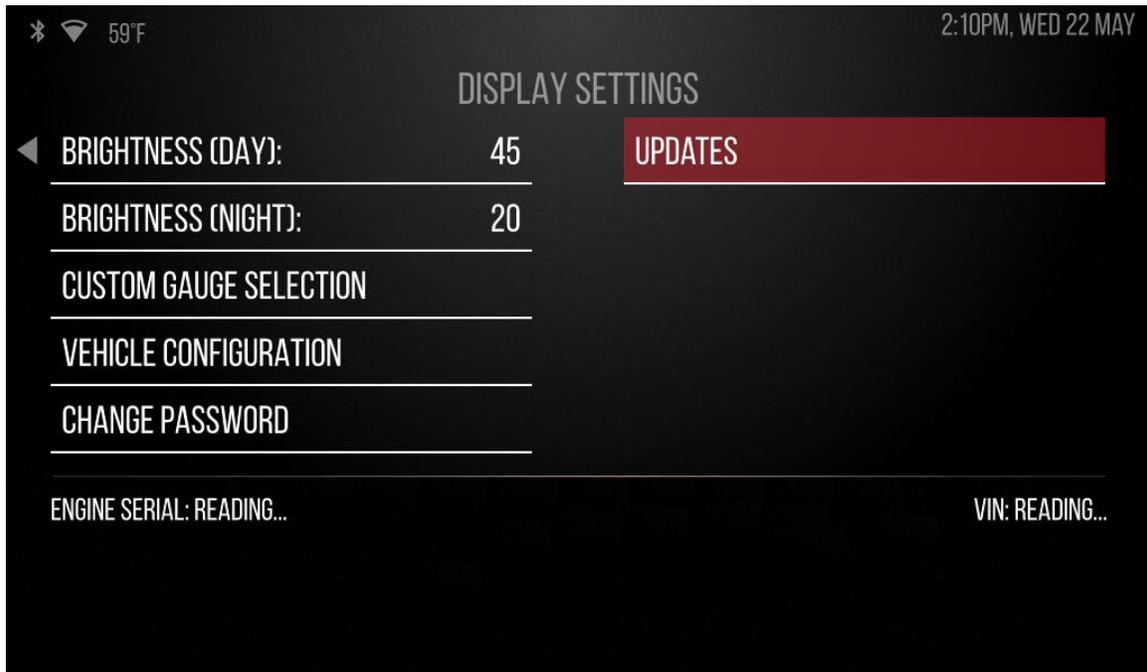


6. In the Updates Menu, click <Check For App Updates>.

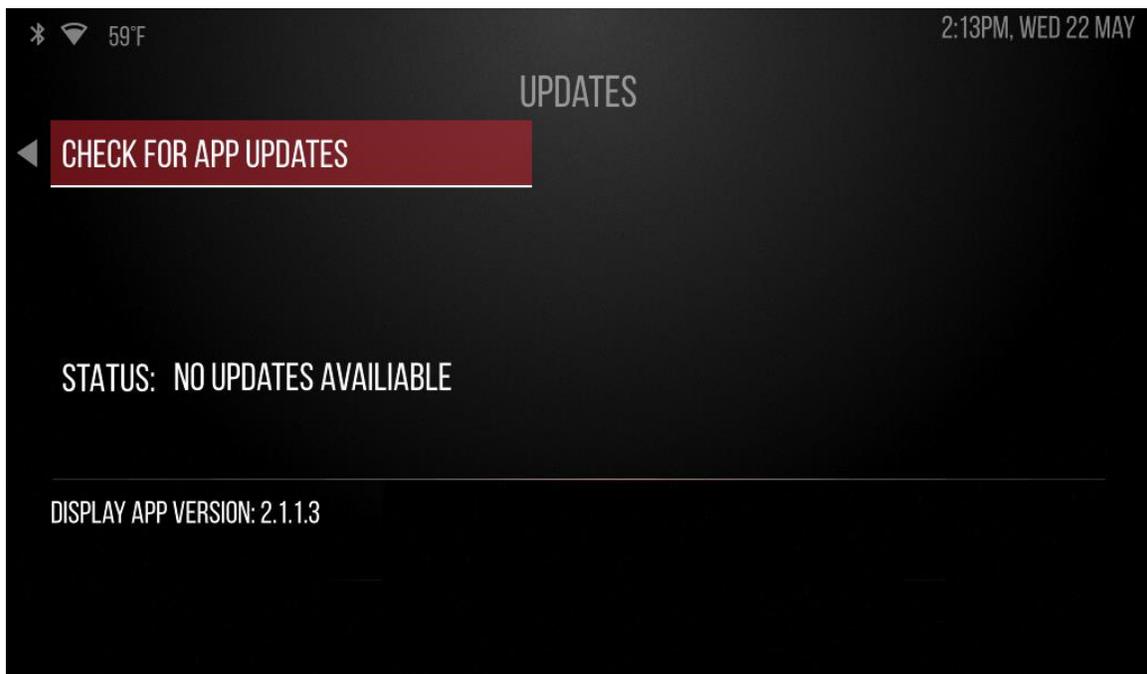


The application will now check for an update:

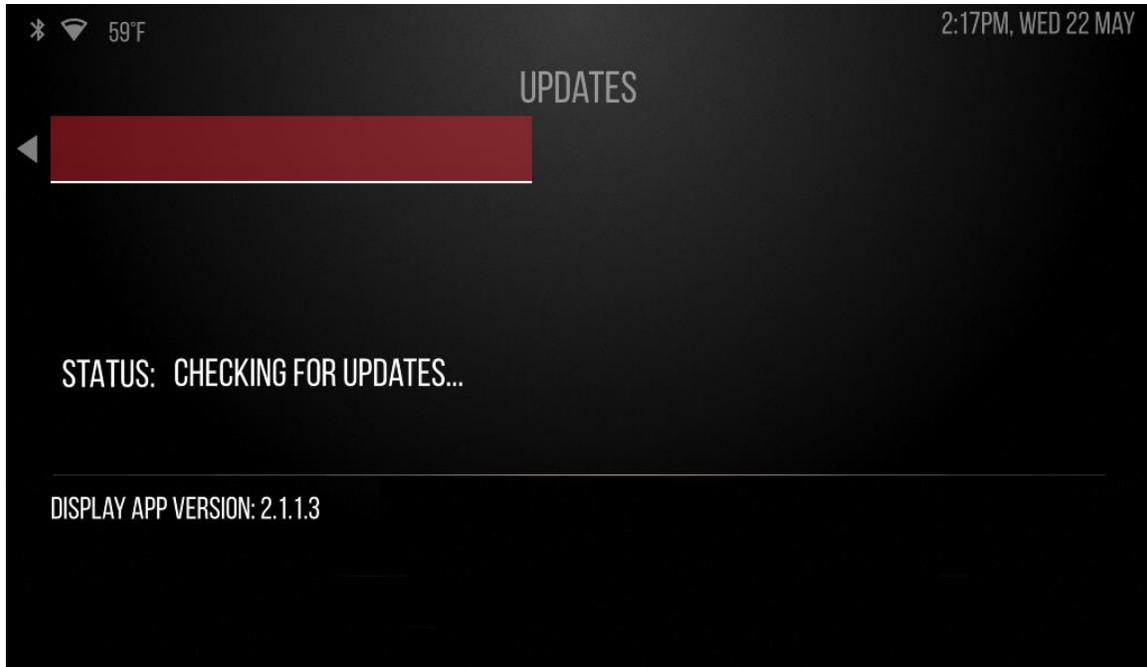

7. If a USB drive is connected with a new version of the Always Up Display software, version, the display will give the option to perform the update:

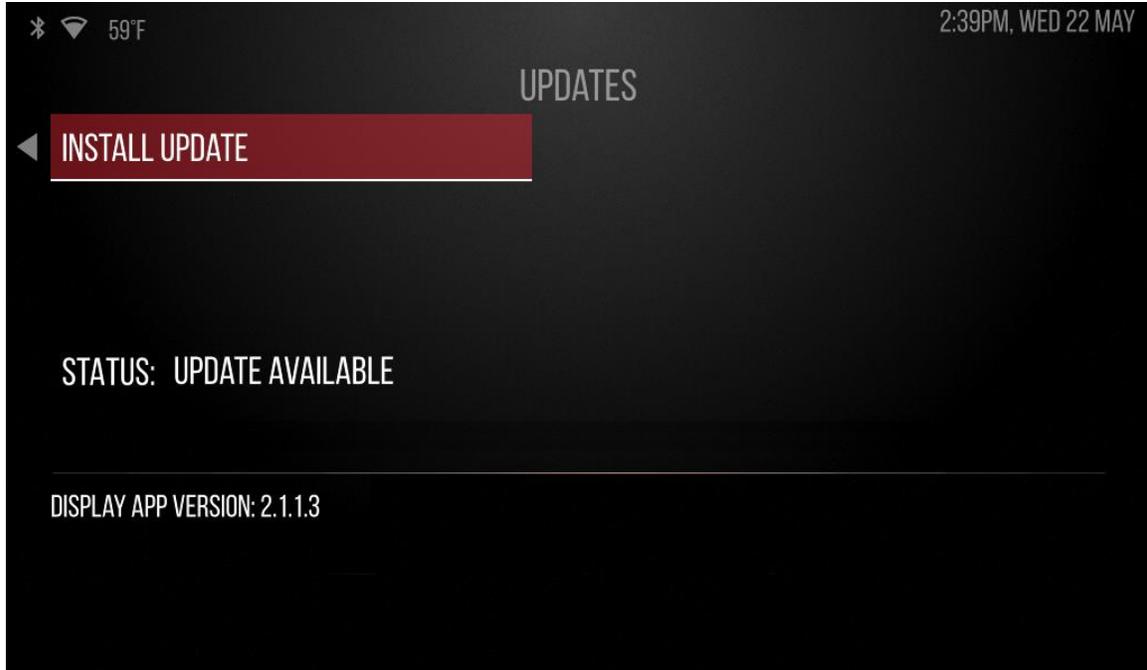

8. Click <Install Update> to begin the update. The update should take under 1 minute.

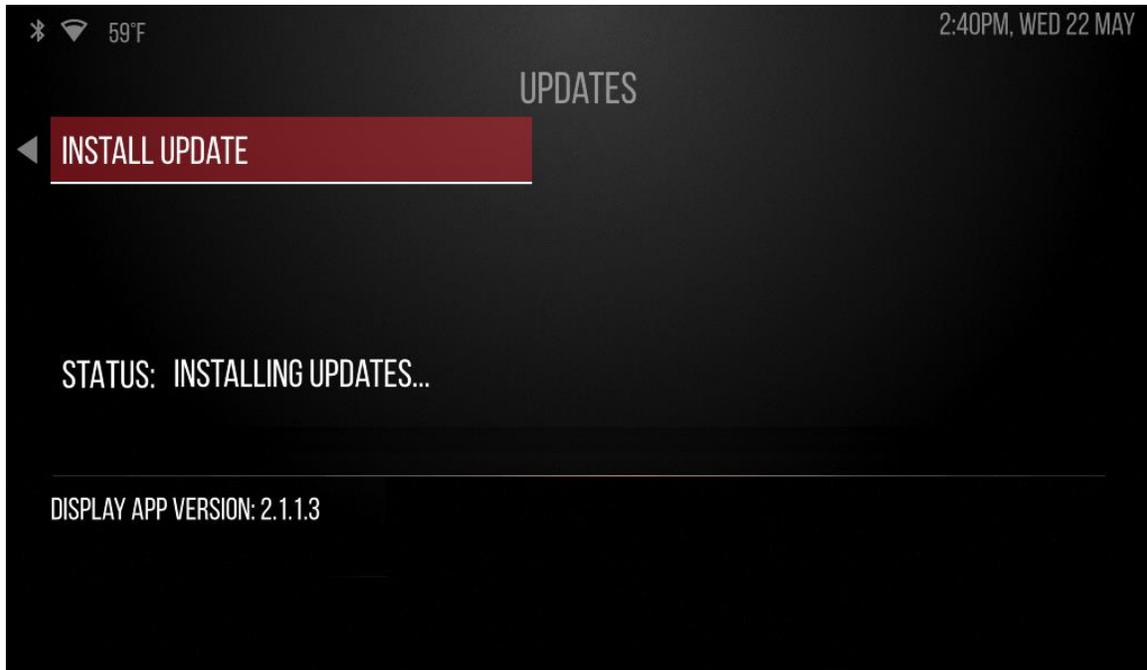

9. Once the update is loaded, the red notice “UPDATE COMPLETE, CYCLE KEY” will appear. Turn the ignition key to OFF and then back to IGN to restart the display. You’re done!

